


Keyboard Slide (-KS) Assembly Instructions



1. Work with the desktop turned upside down on a smooth surface to protect the top surface.



2. The legs of the keyboard slide are adjustable; simply remove the screws, and adjust to the desired height. Reattach screws.

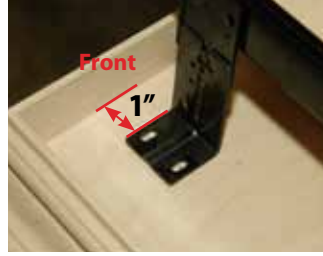

3. The front edge of the keyboard bracket should be 1" back from the rear edge of the front desktop trim. Center the keyboard slide from side to side. Note: The keyboard slide can be positioned where you desire, left or right.



4. Attach the keyboard slide to the desktop using the supplied 1/2" screws.

Optional Keyboard Block Installation



In some instances, there is not enough clearance space between the bottom of the desk trim moulding and the keyboard slide, causing your keyboard to hit on the desk trim. In these cases, addition spacer blocks can be installed to create more space between the keyboard slide and the desktop. Simply attach the spacer blocks using two 1 1/4" course wood screws.



Continue the installation following steps 1-4 above.